
# **POLYWOOD**

# **Assembly Instructions**

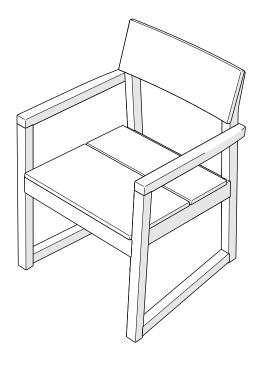

NO ASSEMBLY REQUIRED

EMD200 EDGE Dining Arm Chair



Thank you for choosing POLYWOOD!

We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!



#### Reach Out

Let us know how we're doing: hello@polywoodoutdoor.com (833) 665-6300



# **Stay Connected**

Be the first to hear about new products, giveaways, and more by signing up for our email list: polywoodoutdoor.com/subscribe



### Watch & Learn

For assembly tips and videos visit: polywoodoutdoor.com/assembly

## Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels!

#polywood #rethinkoutdoor



facebook.com/polywoodoutdoor



@POLYWOOD



pinterest.com/polywood



youtube.com/polywood







# Did you know?

POLYWOOD was the original outdoor furniture made from recycled materials.

Learn more about our story: genuinePOLYWOOD.com



# 20-year warranty

View our full warranty: polywoodoutdoor.com/warranty



# Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300



# Cleaning tips

For a Quick Clean: Simply wipe down with soap and water.

For a Deep Clean:

Wipe on bleach and water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:
Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a bleach and water solution and scrub with a softbristle brush. Hose down to rinse.