 
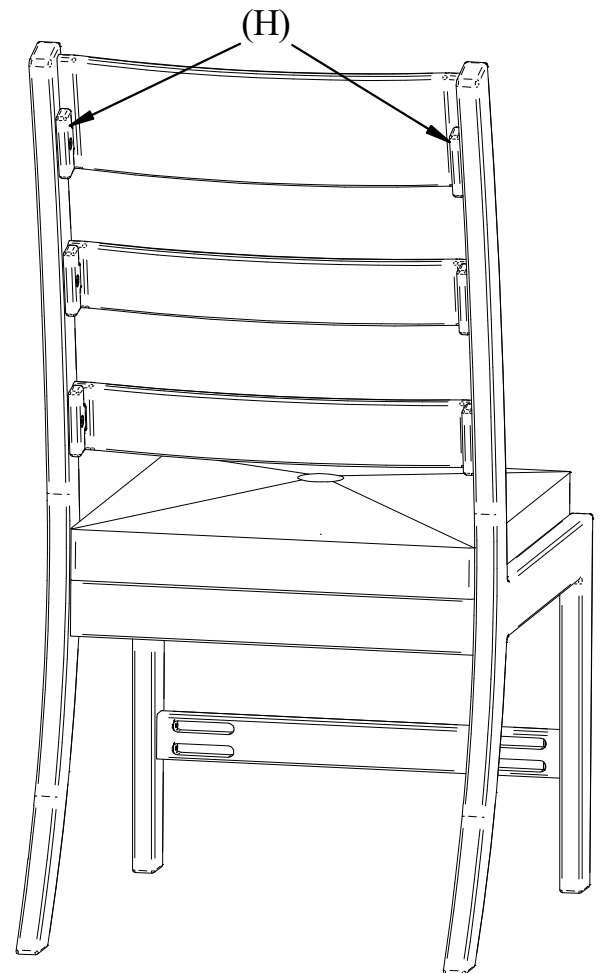 



Parker Dining Side Chair
Chaise d'appoint de salle à manger Parker
Silla auxiliar de comedor Parker

Assembly Instructions
instructions de montage
Instrucciones de montaje


BERLIN
GARDENS

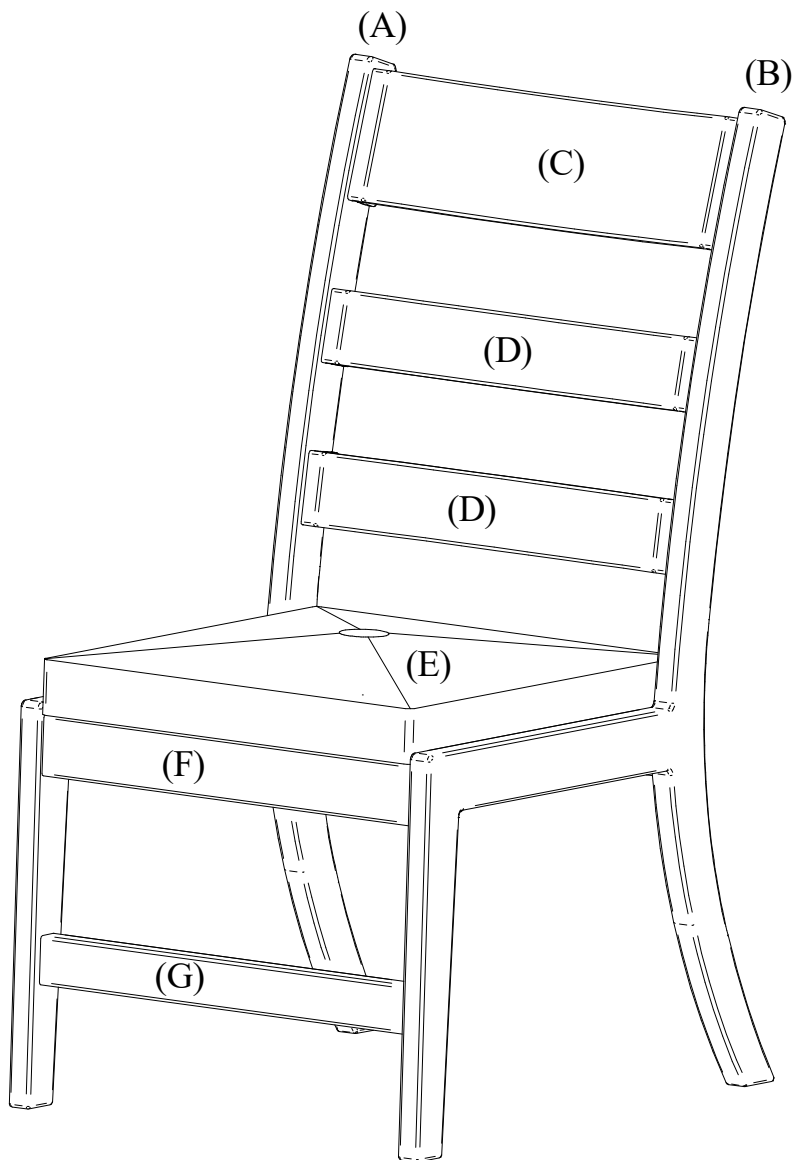

 
(A) x1

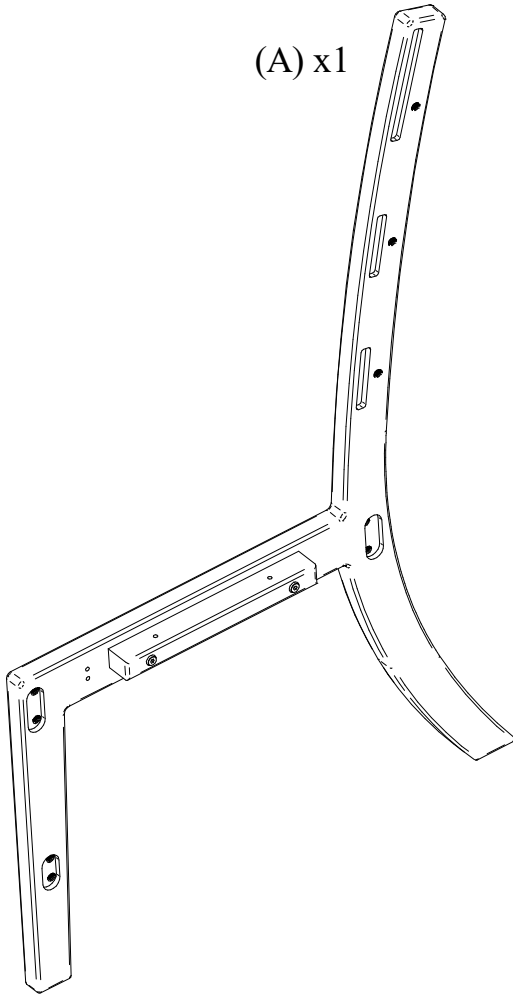

 
(B) x1

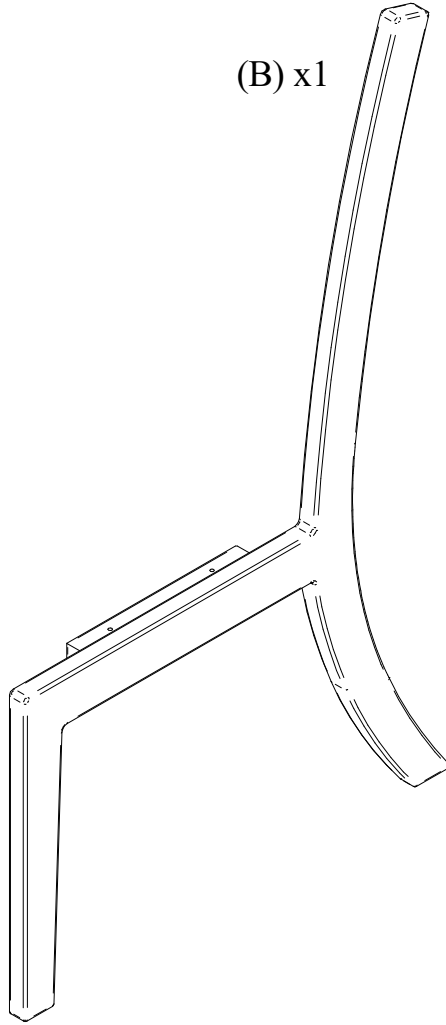

 
(C) x1

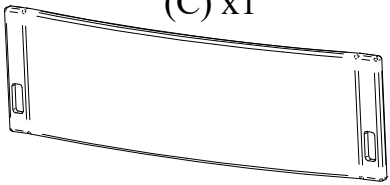

 
(D) x2

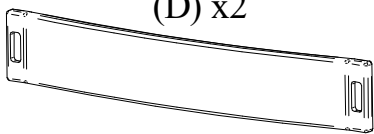

 
(G) x1

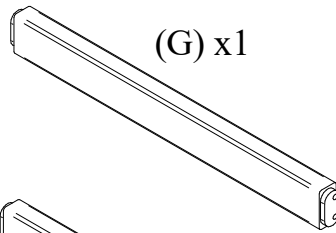

 (F) x1

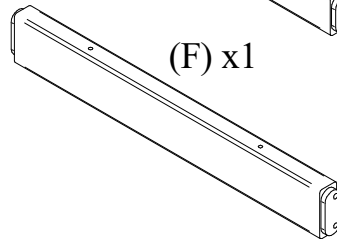

 (E) x1

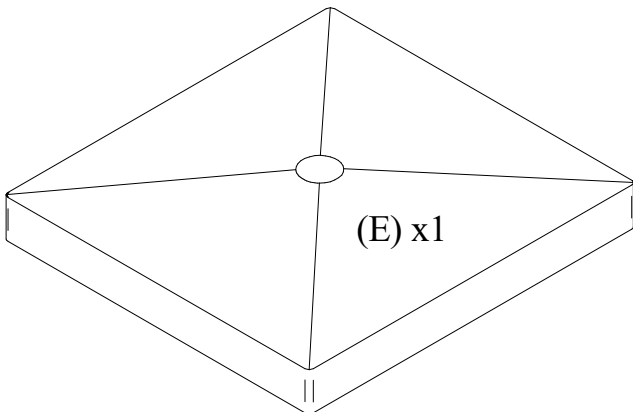


(H) x6




Hardware Included
Matériel inclus
Herrajes incluidos

 
(95326) x1



(9532) x1

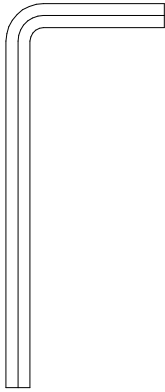 


(38300) x8

 


(38112) x4



 
(214112) x8



(21434) x6

 

 Items Not Included
Articles non inclus
Artículos no incluidos

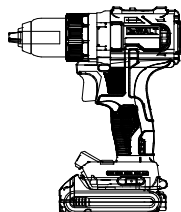


#2 Square Drive Bit
Embout d'entraînement carré #2
Punta cuadrada n.º 2




1

 - (A) x1
- (B) x1
- (C) x1
- (D) x2
- (F) x1
- (G) x2
- (H) x6

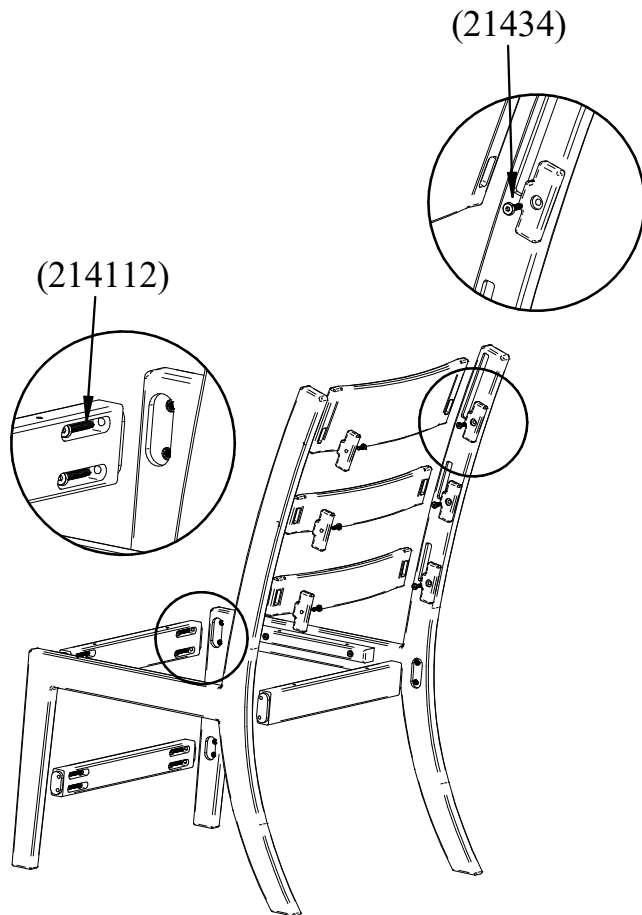

1a

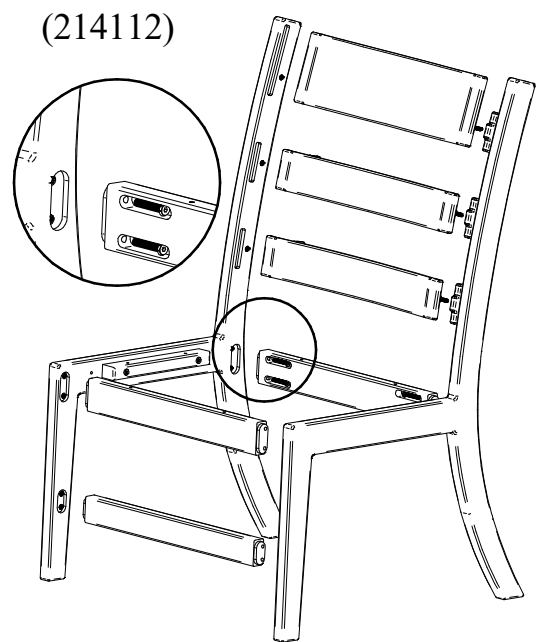 

2

- (E) x1

