410





ASSEMBLY INSTRUCTIONS

1


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.


Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.


Tools Required: 4mm Alle


4mm Allen Wrench (included); #2 Phillips Head Screwdriver;

(Recommended: Rubber Mallet; Power Drill)

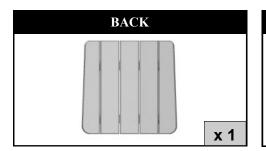

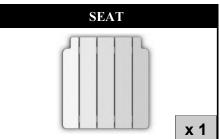


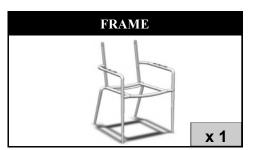


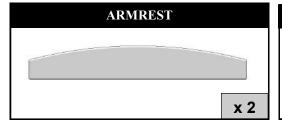






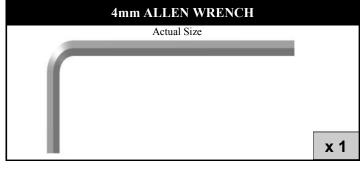






ATTACH SEAT

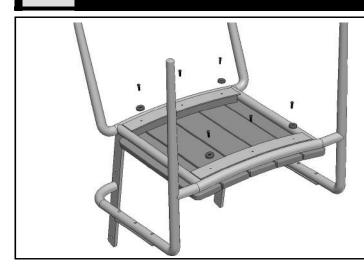

On a clean flat surface push seat tight to the front of the chair frame. Attach Seat with (6) 3/4" Phillips pan head screws. Secure Bumpers in locations shown. Do not over tighten.

3


ATTACH ARMRESTS

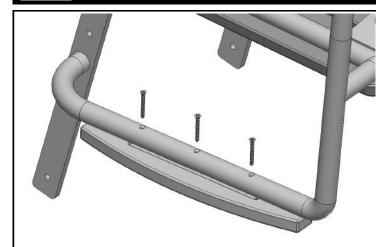

On a clean flat surface align armrest with slot and attach using (3) 1 5/8" Phillips head screws. Repeat on opposite side. Do not over tighten.

4

ATTACH BACK

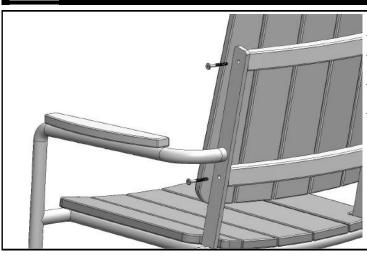

Align pilot holes in rear yokes of Back with the holes in the Chair frame. Secure with (4) 50mm Hex lags. Do not over tighten.