

# Greenwich Dining Chairs

601W Chair



SEASIDE CASUAL




## ASSEMBLY INSTRUCTIONS

**1**

**PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.**  
Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.


**Tools Required:** #2 Phillips Head Screwdriver;  
(Recommended: Rubber Mallet; High Powered Drill)

**Back Assembly**

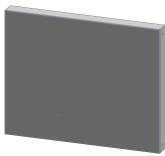


x 1

**Seat Assembly**

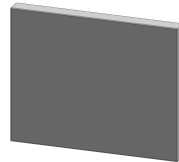

x 1

**601 Chair Frame Assembly**

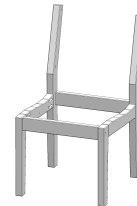

x 1

**M6 x 40mm PPMS**




x 4

**1**


**ATTACH SEAT ASSEMBLY TO SIDES**

**2**

**ATTACH SEAT ASSEMBLY TO SIDES**

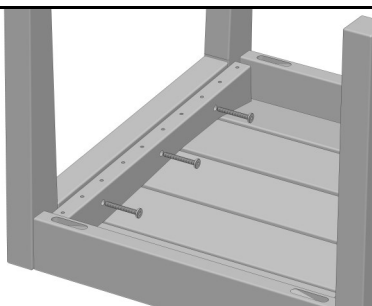

Secure Seat Assembly to Side Assembly using (6) 50mm LAGS.

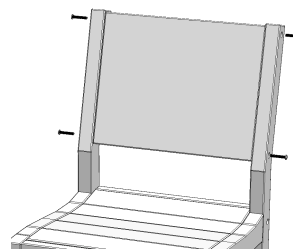

Secure Back Assembly to Side Assembly using (4) m6 x 40mm PPMS