




# COMPONENTS

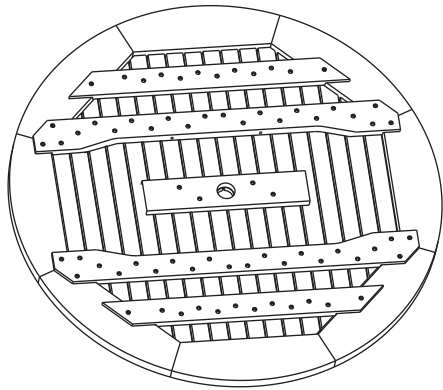


101

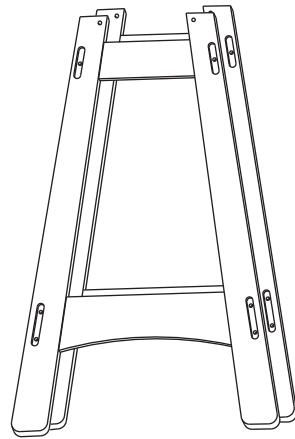


102



103



104



105




106

## HARDWARE


<p>A</p> <p>M6 x 65 mm 12 pcs.</p>	<p>B</p> <p>M6 x 50 mm 2 pcs.</p>	<p>C</p> <p>50 mm 4 pcs.</p>	<p>D</p> <p>14 pcs.</p>
<p>E</p> <p>1 pc.</p>	<p>F</p> <p>1 pc.</p>		

## TOOLS REQUIRED




flat head screwdriver


### STEP 1

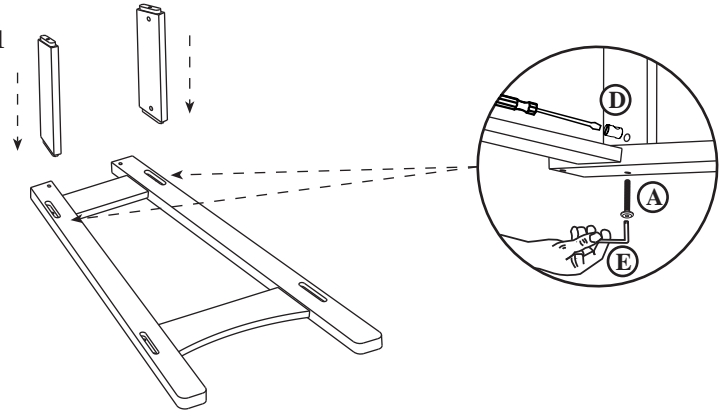



### STEP 2

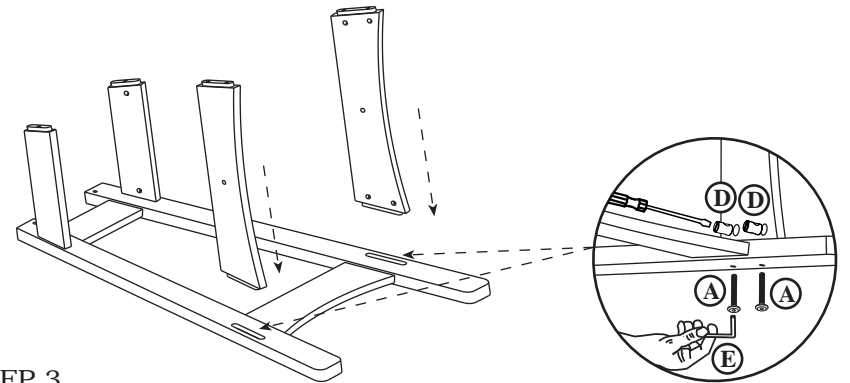



### STEP 3

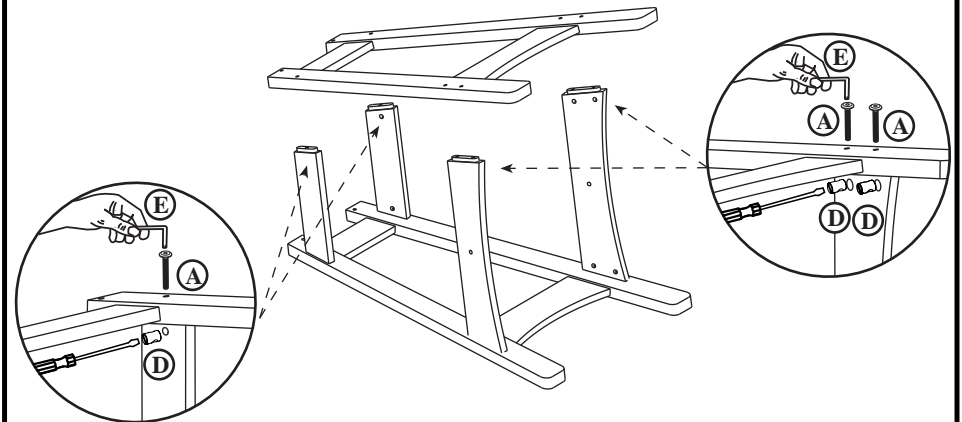



STEP 4

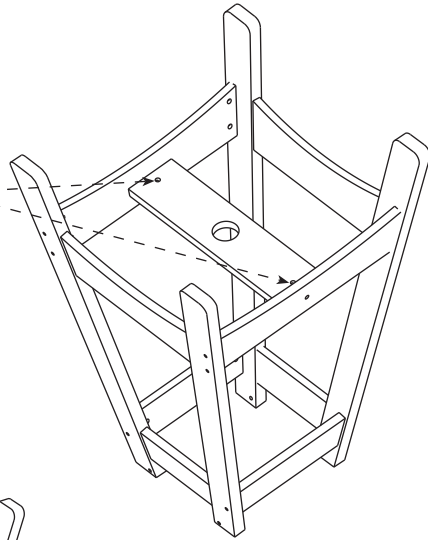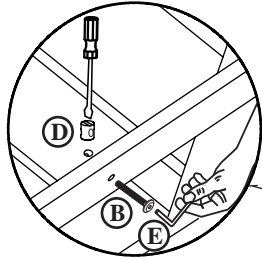

STEP 5

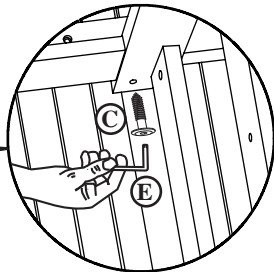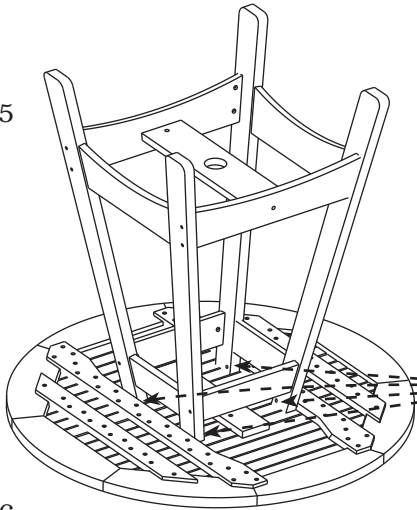

STEP 6

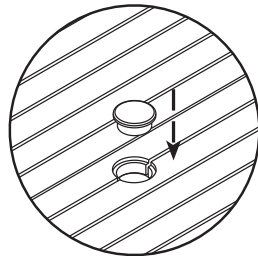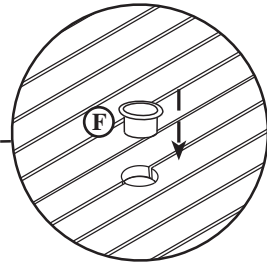

# CAPRI HI DINING TABLE (#6424)

# 62220

## Assembly Instructions

