










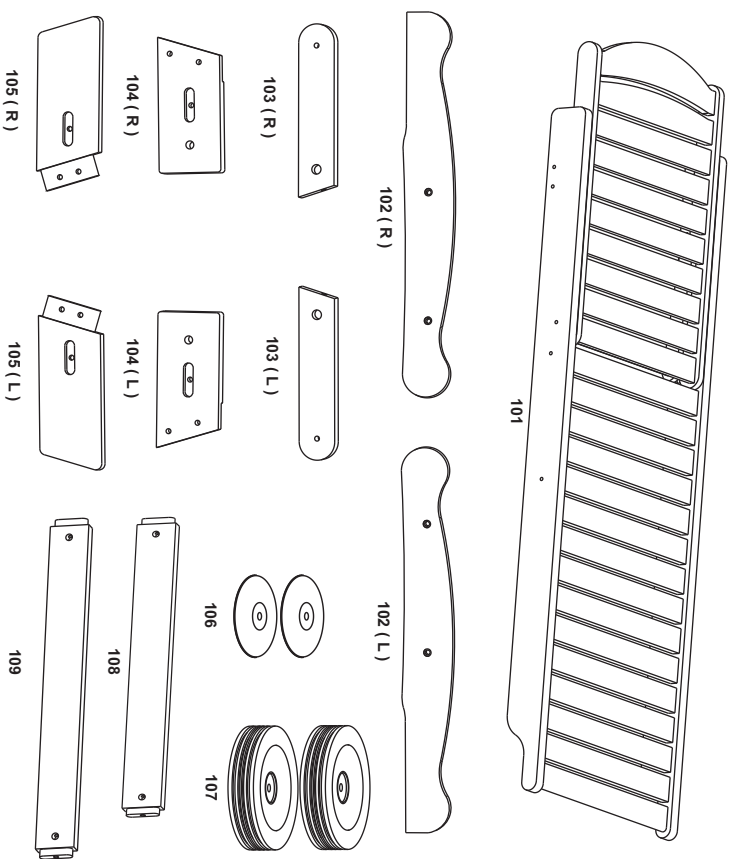


COMPONENTS



HARDWARE


A  M6 x 55 mm 4 pcs.	B  M6 x 35 mm 8 pcs.	C  M6 x 20 mm 4 pcs.	D  8 pcs.
E  4 pcs.	F  2 pcs.	G  4 pcs.	H  4 pcs.
I  4 pcs.	J  2 pcs.	K  3/8" 1 pc.	

TOOLS REQUIRED




flat head screwdriver


STEP 1

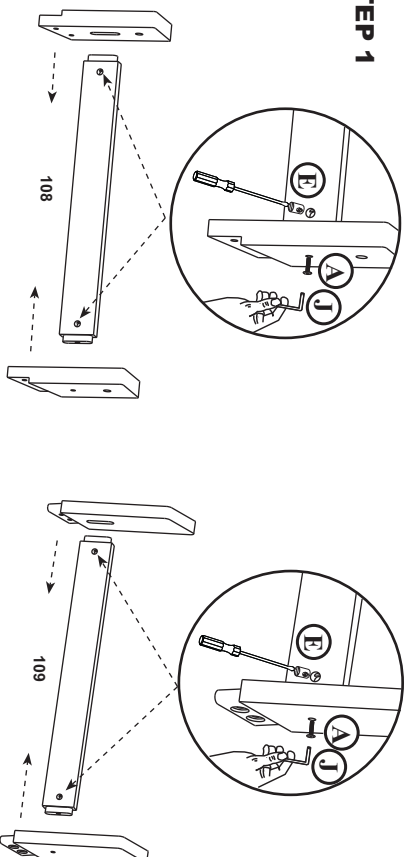


STEP 2

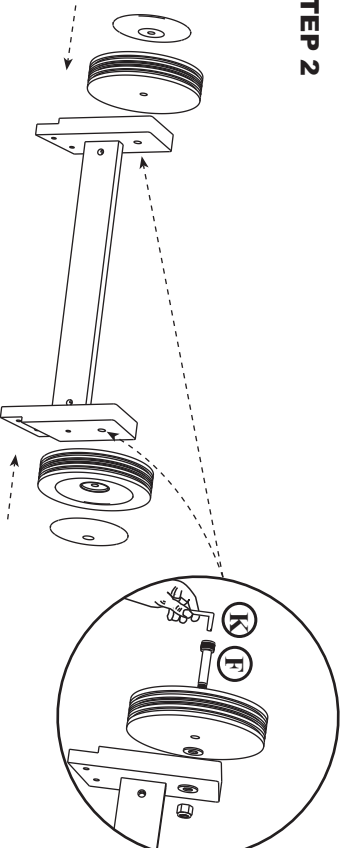


STEP 3

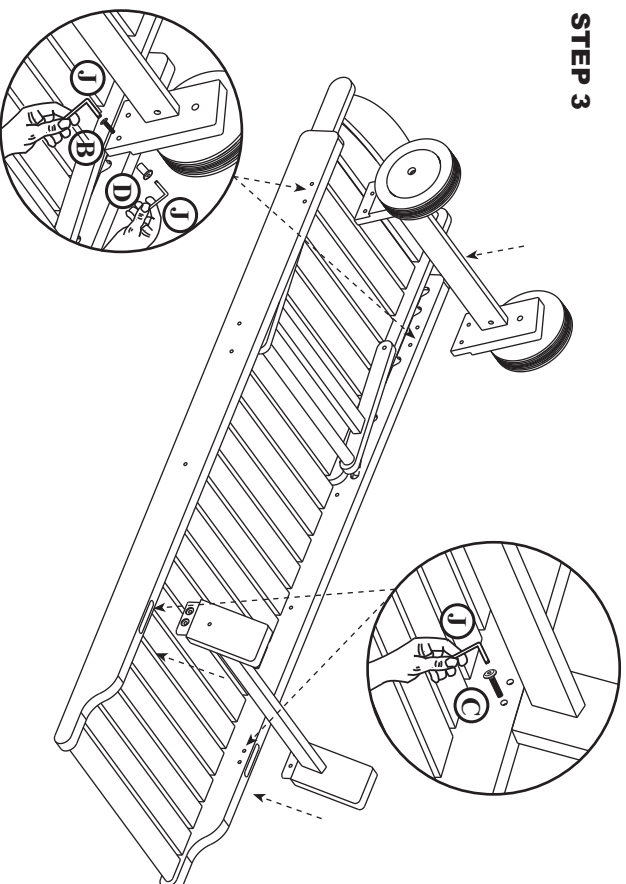

STEP 4

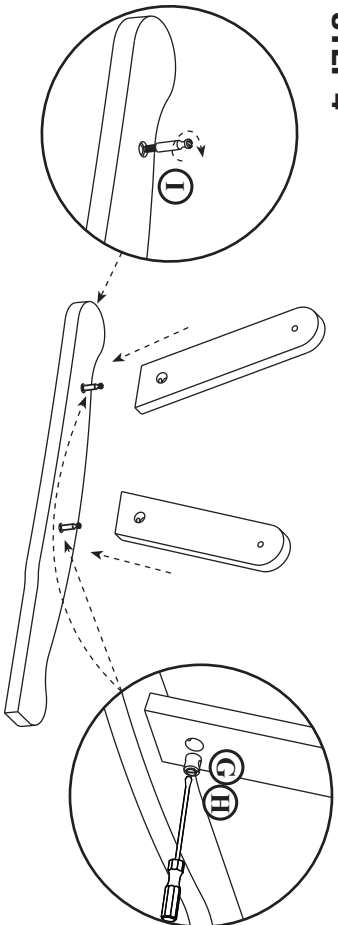

STEP 5

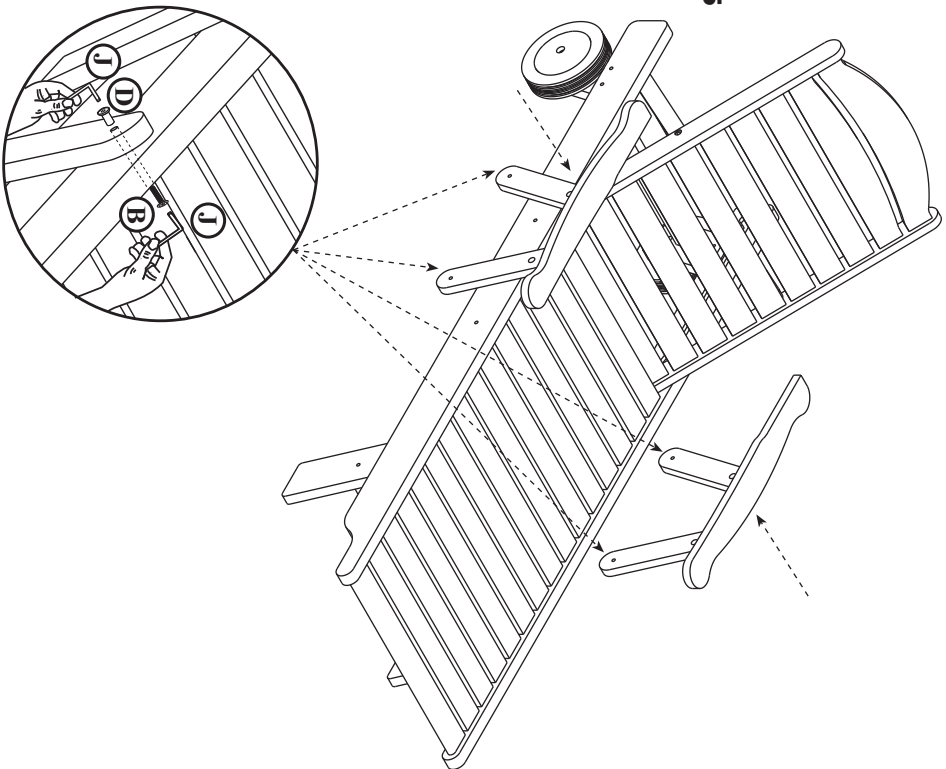

CHAISE LOUNGE (#6501)

62440

Assembly Instructions

