



COMPONENTS

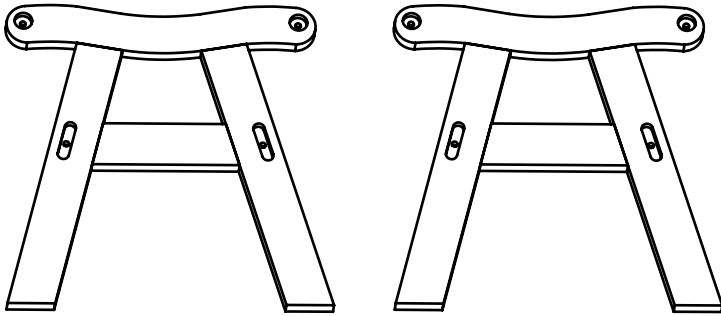

101

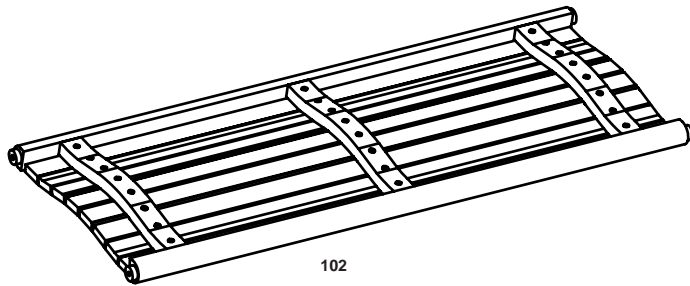

102



103

HARDWARE

A




M6 x 55
8 pcs.

B




8 pcs.

C




1 pc.

TOOLS REQUIRED




flat head screwdriver


STEP 1

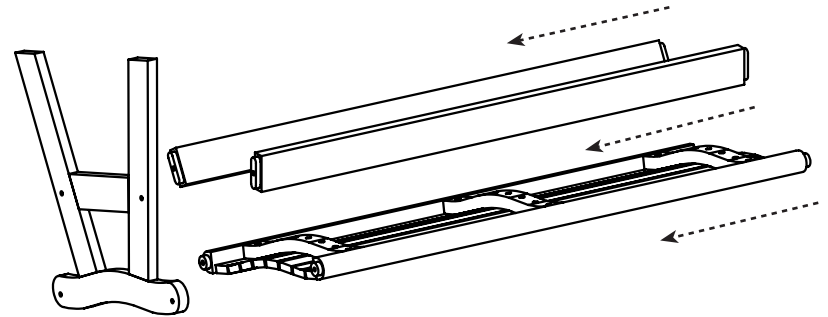


STEP 2

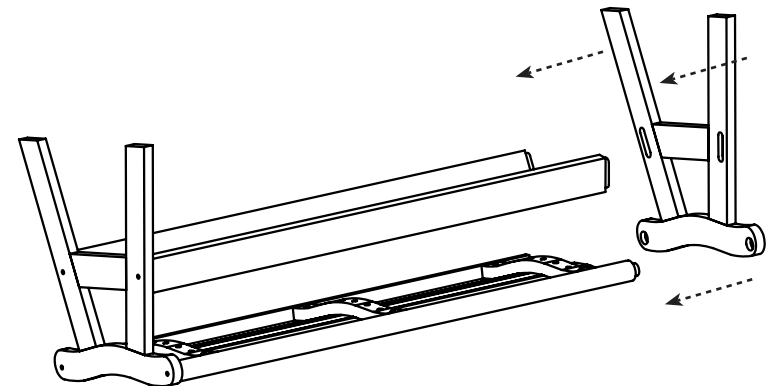

STEP 3

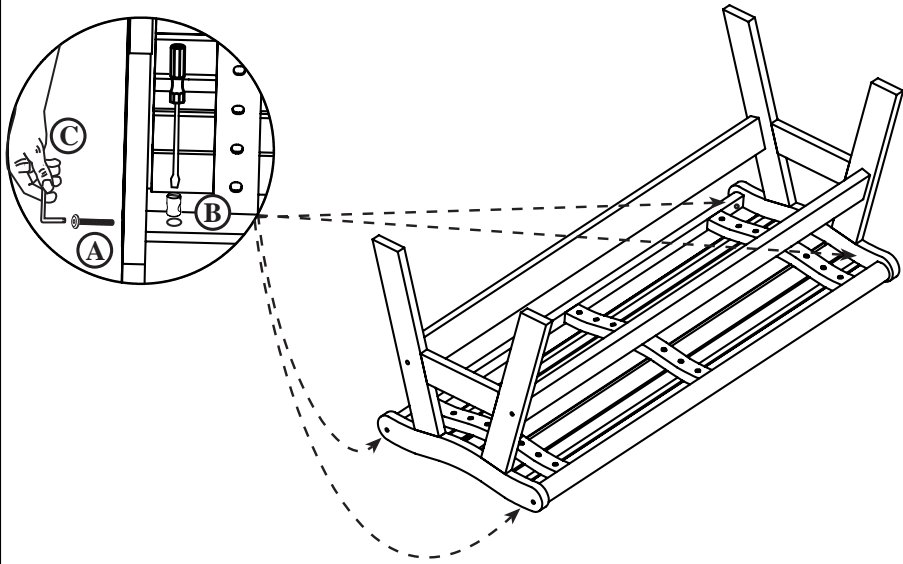

STEP 4

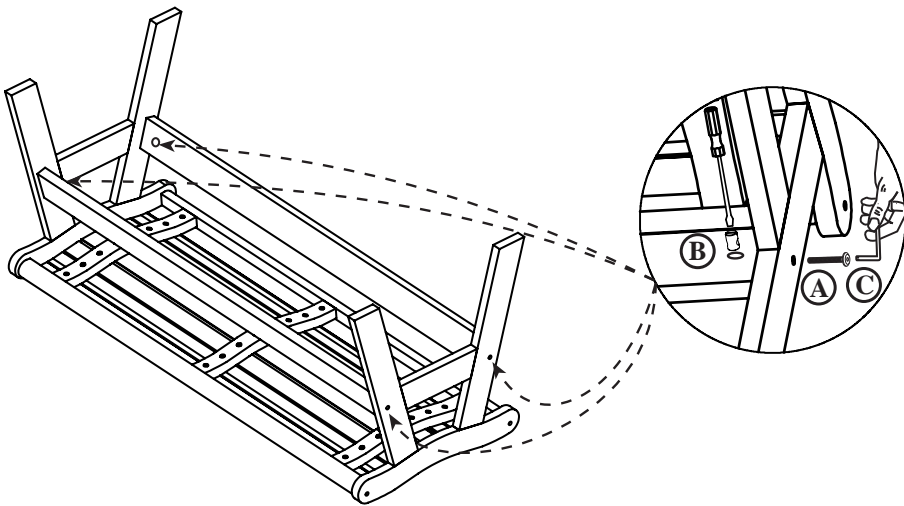

AMBER BACKLESS BENCH (#6178)

62560

Assembly Instructions

