



NOTE: 8 of the 13 bolts are pre-assembled into protective slat. SEE STEP 1. You will remove these 8 bolts shown below off of protective slats off both ends of the seat assembly using the allen wrench provided. Protective slats are to be removed and discarded but can be recycled. DO NOT DISCARD BOLTS; these will be the remaining 8 bolts of the 13 bolts total you will need to assemble this bench.

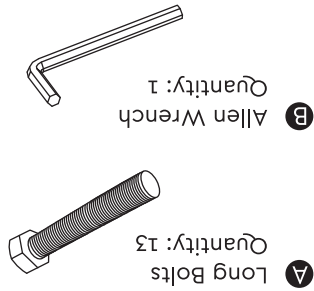


**HARDWARE**

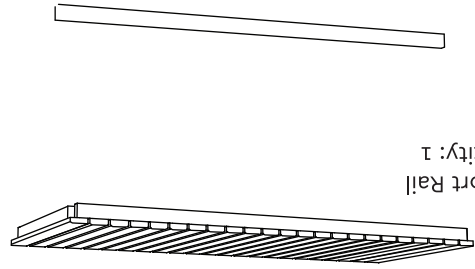


④ Support Rail  
Quantity: 1



③ Seat  
Quantity: 1

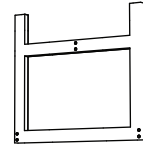

② Left Leg Assembly  
Quantity: 1

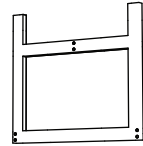


① Right Leg Assembly  
Quantity: 1

**COMPONENTS**

OXFORD *G* GARDEN®

TRAVIRA BACKLESS BENCH - 48"

**ASSEMBLY  
INSTRUCTIONS**

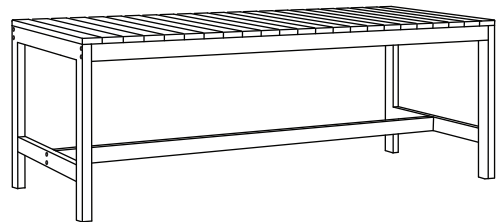

15 Kingbrook Parkway, Suite 100  
Simpsonville, KY 40067

p. 877.866.3331 f. 502.719.8888


oxfordgarden.com

## INSTRUCTIONS

### STEP 1


Lay seat assembly ③ on a clean flat surface. Using the allen wrench provided, remove the protective slat. Do not discard bolts Ⓐ, you will use them for the assembly of the bench. Repeat on left side.

NOTE: The protective slat is a recyclable plastic. Simply place in recycle bin.

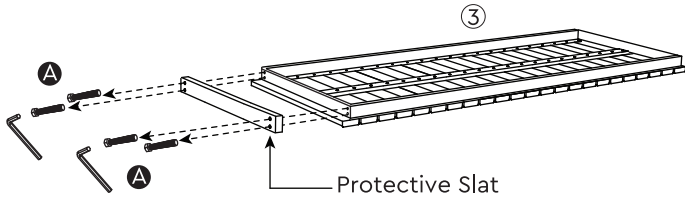

### STEP 2


Connect the right leg assembly ① to the seat using the four bolts Ⓐ that were removed from the protective slat in Step 1.

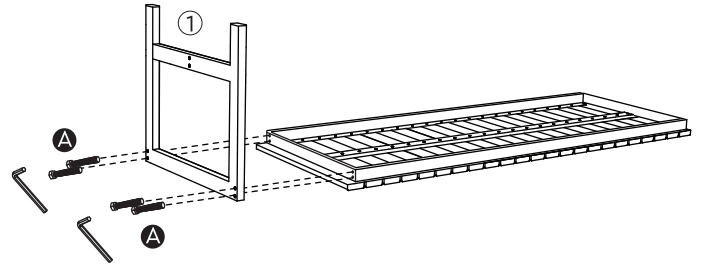

### STEP 3


Next, insert support rail ④ to the already assembled right leg. Secure using two bolts as shown.

Note: Keep supported until remaining leg assembly is secure.

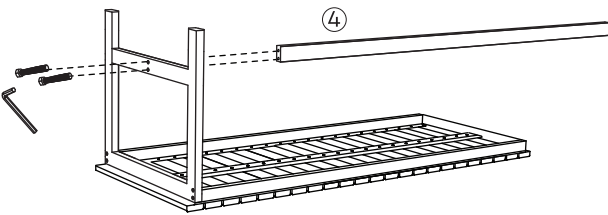


### STEP 4

Insert the remaining leg ② into the already assembled parts. Secure the leg to the support rail by using two bolts.

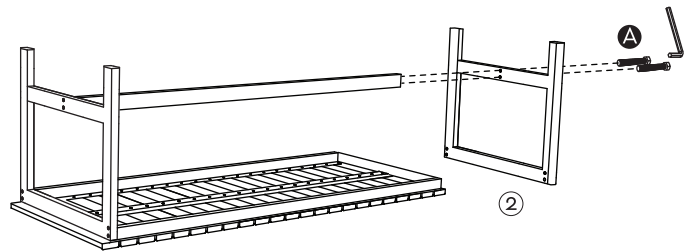

### STEP 5

Further secure the leg by using four bolts as shown.

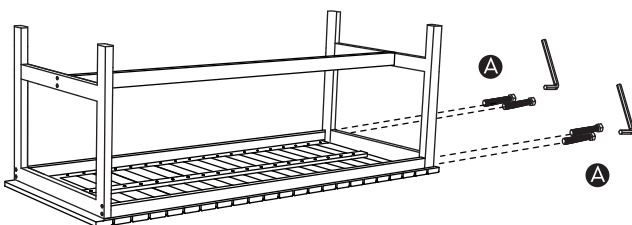

### STEP 6

Turn right side up and enjoy!

