


See pg 2 for instructions

Should you desire to secure modular seating to each other, connecting brackets and hardware are provided in this package.

There is no assembly required for this unit.

NOTES



C ALLEN Wrench
Quantity: 1




B Metal Washers
Quantity: 2



A BOLTS
Quantity: 2

HARDWARE




1 Connecting Brackets
Quantity: 2

COMPONENTS

OXFORD *G* GARDEN®

TRAVIRA MODULAR ASSEMBLY INSTRUCTIONS

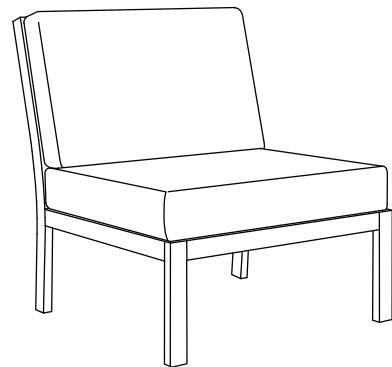

15 Kingbrook Parkway, Suite 100
Simpsonville, KY 40067

p. 877.866.3331 f. 502.719.8888

oxfordgarden.com

INSTRUCTIONS

STEP 1

Should you desire to secure one modular unit to another, on a clean flat surface, first lay modular unit on it's back, place connecting brackets ① over holes located on the under side of the unit. Using the allen wrench provided, secure brackets by using washer B and bolt A as shown.

