




HOMECREST[™]
O U T D O O R L I V I N G

COMFORT & SAFETY
Information

Please Read

Dealer Note: Please leave on chair for consumer reference.

Comfort Adjustment

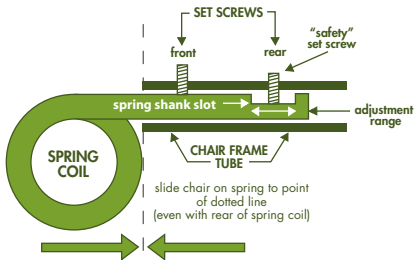

1. Loosen all set screws.
2. Slide chair on springs exactly per illustration.
3. To set the comfort adjustment, tighten rear "safety" set screws onto the spring shank slots, then loosen one full turn only.
4. Slide chair toward the spring for a firmer rock or away from the spring for a softer rock, making sure the set screws are in the spring shank slot.
5. Tighten all screws securely after final adjustments.

Comfort Adjustment

Safety Warning

The 2 rear set screws are “safety” set screws and must always be seated in slotted portion of spring shank before sitting in the chair. If this is not done, the frame could detach from base and injury could result.

Remember, rear set screws must be fully seated in spring shank slot.

COMFORT & SAFETY

Information

Please Read



Made in the U.S.A.

Dealer Note: Please leave on chair for consumer reference.